AIR SOURCE HEAT PUMP - BARD UNITS

APPLICABLE UNITS: AHU-8-1 AND AHU-8-2

RUN CONDITIONS - CONTINUOUS: THE UNIT SHALL RUN CONTINUOUSLY DURING OCCUPIED HOURS

- AND SHALL MAINTAIN:
- A 74°F (ADJ.) COOLING SETPOINT
- A 70°F (ADJ.) HEATING SETPOINT.
- UNIT SHALL RUN ONLY TO MAINTAIN SETPOINTS DURING UNOCCUPIED HOURS.

ALARMS SHALL BE PROVIDED AS FOLLOWS:

 HIGH ZONE TEMP: IF THE ZONE TEMPERATURE IS GREATER THAN THE COOLING SETPOINT BY A USER DEFINABLE AMOUNT (ADJ.).

 LOW ZONE TEMP: IF THE ZONE TEMPERATURE IS LESS THAN THE HEATING SETPOINT BY A USER DEFINABLE AMOUNT (ADJ.). <u>FAN:</u> THE FAN SHALL RUN ANYTIME THE UNIT IS COMMANDED TO RUN,

UNLESS SHUTDOWN ON SAFETIES. THE FAN SPEEDS SHALL BE INDEXED AS FOLLOWS:

- LOW SPEED SHALL RUN ANYTIME THE ZONE TEMPERATURE IS WITHIN SETPOINTS.
- HIGH SPEED SHALL RUN ANYTIME THE ZONE TEMPERATURE IS OUTSIDE OF SETPOINTS.

HEATING AND COOLING - 2 COMPRESSOR STAGES: THE CONTROLLER SHALL MEASURE THE ZONE TEMPERATURE AND

STAGE THE COMPRESSORS TO MAINTAIN ITS SETPOINT. TO PREVENT SHORT CYCLING, THERE SHALL BE A USER DEFINABLE (ADJ.) DELAY BETWEEN STAGES, AND EACH STAGE SHALL HAVE A USER DEFINABLE (ADJ.) MINIMUM RUNTIME. THE COMPRESSOR SHALL RUN SUBJECT TO ITS OWN INTERNAL SAFETIES AND CONTROLS.

THE HEATING SHALL BE ENABLED WHENEVER:

- OUTSIDE AIR TEMPERATURE IS LESS THAN 60°F (ADJ.).
- AND ZONE TEMPERATURE IS LESS THAN 65°F (ADJ.).
- AND THE FAN STATUS IS ON.
- AND THE REVERSING VALVE IS IN HEAT MODE.

THE COOLING SHALL BE ENABLED WHENEVER:

- OUTSIDE AIR TEMPERATURE IS GREATER THAN 45°F (ADJ.).
- AND ZONE TEMPERATURE IS GREATER THAN 76°F (ADJ.).
- AND THE FAN STATUS IS ON.
- AND THE REVERSING VALVE IS IN COOL MODE.

ON MODE CHANGE, THE COMPRESSOR SHALL BE DISABLED AND REMAIN OFF UNTIL AFTER THE REVERSING VALVE HAS CHANGED POSITION.

ALARMS SHALL BE PROVIDED AS FOLLOWS:

- COMPRESSOR 1 RUNTIME EXCEEDED: COMPRESSOR 1 RUNTIME EXCEEDS A USER DEFINABLE LIMIT (ADJ.).
- COMPRESSOR 2 RUNTIME EXCEEDED: COMPRESSOR 2 RUNTIME EXCEEDS A USER DEFINABLE LIMIT (ADJ.).

THE CONTROLLER SHALL MEASURE THE ZONE TEMPERATURE AND MODULATE THE MIXED AIR DAMPERS IN SEQUENCE TO MAINTAIN THE ZONE COOLING SETPOINT. THE OUTSIDE AIR DAMPER SHALL MAINTAIN A MINIMUM ADJUSTABLE POSITION TO OBTAIN MINIMUM OUTDOOR AIR FLOWS AS INDICATED IN THE EQUIPMENT SCHEDULES.

ECONOMIZER:

THE ECONOMIZER SHALL BE ENABLED WHENEVER:

- OUTSIDE AIR TEMPERATURE IS AT LEAST 3°F (ADJ.) LESS THAN THE ZONE TEMPERATURE.
- AND THE OUTSIDE AIR TEMPERATURE IS LESS THAN 60°F (ADJ.)
- THE OUTSIDE AIR DAMPER SHALL CLOSE AND THE RETURN AIR DAMPER SHALL OPEN WHEN THE UNIT IS OFF.

MINIMUM OUTSIDE AIR VENTILATION - FIXED PERCENTAGE: THE OUTSIDE AIR DAMPERS SHALL MAINTAIN A MINIMUM POSITION (ADJ.) DURING BUILDING OCCUPIED HOURS AND BE CLOSED DURING UNOCCUPIED HOURS.

SUPPLEMENTAL ELECTRIC HEATING STAGE: THE CONTROLLER SHALL MEASURE THE ZONE TEMPERATURE AND STAGE THE HEATING TO MAINTAIN ITS HEATING SETPOINT SHOULD THE COMPRESSORS NOT MEET THE HEATING DEMAND. TO PREVENT SHORT CYCLING, THE STAGE SHALL HAVE A USER DEFINABLE (ADJ.) MINIMUM RUNTIME.

THE HEATING SHALL BE ENABLED WHENEVER:

- THE HEAT PUMP IS IN HEATING MODE.
- AND THE FAN IS ON.

EA AI - FILTER DIFFERENTIAL PRESSURE AO - RETURN AIR DAMPER -(M) + / + / + N.O. AO - OUTSIDE AIR DAMPER _____*> OA N.C. BO - REVERSING VALVE ELEC HP BO - COMPRESSOR STAGE 1 BO - COMPRESSOR STAGE 2 BI - FAN STATUS BO - FAN LOW SPEED BO - FAN HIGH SPEED



AND THE ZONE TEMPERATURE IS BELOW HEATING SETPOINT.

FILTER DIFFERENTIAL PRESSURE MONITOR:

THE CONTROLLER SHALL MONITOR THE DIFFERENTIAL PRESSURE ACROSS THE FILTER.

ALARMS SHALL BE PROVIDED AS FOLLOWS:

 FILTER CHANGE REQUIRED: FILTER DIFFERENTIAL PRESSURE EXCEEDS A USER DEFINABLE LIMIT (ADJ.).

DISCHARGE AIR TEMPERATURE: THE CONTROLLER SHALL MONITOR THE DISCHARGE AIR TEMPERATURE.

ALARMS SHALL BE PROVIDED AS FOLLOWS:

- HIGH DISCHARGE AIR TEMP: IF THE DISCHARGE AIR TEMPERATURE IS GREATER THAN 120°F (ADJ.).
- LOW DISCHARGE AIR TEMP: IF THE DISCHARGE AIR TEMPERATURE IS LESS THAN 40°F (ADJ.).

FAN STATUS:

THE CONTROLLER SHALL MONITOR THE FAN STATUS. ALARMS SHALL BE PROVIDED AS FOLLOWS:

- FAN FAILURE: COMMANDED ON, BUT THE STATUS IS OFF.
- FAN IN HAND: COMMANDED OFF, BUT THE STATUS IS ON.
- FAN RUNTIME EXCEEDED: FAN STATUS RUNTIME EXCEEDS A USER DEFINABLE LIMIT (ADJ.).

ZONE HUMIDITY:

THE CONTROLLER SHALL MONITOR THE ZONE HUMIDITY. ALARMS SHALL BE PROVIDED AS FOLLOWS:

- HIGH ZONE HUMIDITY: IF THE ZONE HUMIDITY IS GREATER THAN 70% (ADJ.).
- LOW ZONE HUMIDITY: IF THE ZONE HUMIDITY IS LESS THAN 35% (ADJ.).

AIR SOURCE HEAT

	HARDWARE POINTS				SOFTWARE POINTS					
POINT NAME	AI	AO	ВІ	BO	AV	BV	SCHED	TREND	ALARM	SHOW ON GRAPHIC
ZONE TEMP	Х							х		Х
FILTER DIFFERENTIAL PRESSURE	Х							х		Х
DISCHARGE TEMP	Х							х		Х
ZONE HUMIDITY	Х							х		Х
RETURN AIR DAMPERS		х						х		Х
OUTSIDE AIR DAMPERS		x						х		Х
FAN STATUS			х					х		Х
FAN LOW SPEED				Х				Х		Х
FAN HIGH SPEED				х				х		Х
REVERSING VALVE				х				х		Х
COMPRESSOR STAGE 1				х				х		Х
COMPRESSOR STAGE 2				х				х		Х
HEATING STAGE 1				х				х		Х
SCHEDULE							Х			
HEATING SETPOINT								х		Х
COOLING SETPOINT								х		Х
HIGH ZONE TEMP									х	
LOW ZONE TEMP									х	
COMPRESSOR 1 RUNTIME EXCEEDED									х	
COMPRESSOR 2 RUNTIME EXCEEDED									Х	
FILTER CHANGE REQUIRED									х	
HIGH DISCHARGE AIR TEMP									х	
LOW DISCHARGE AIR TEMP									Х	
FAN FAILURE									х	
FAN IN HAND									х	
FAN RUNTIME EXCEEDED									х	
HIGH ZONE HUMIDITY									X	
LOW ZONE HUMIDITY									X	
TOTALS	4	2	1	6	0	0	1	15	12	15
	TOTAL HARDWARE (13)			TOTAL SOFTWARE (28)						



AIR SOURCE HEAT PUMP - BARD UNITS

PUMP	- BARD	UNITS
------	--------	-------

		TETRA TECH]	www.tetratecn.com	101 QUALITY CIRCLE, SUITE 140 HUNTSVILLE, ALABAMA 35806	PHONE: (256) 424-4077 FAX: (256) 424-4097	
	Comments of the second se	PR	ID IN A IN				
-	ВҮ						
	DESCRIPTION						
	K DATE						
	HUNTSVILLE UTILITIES	SOUTHEAST WATER TREATMENT PLANT		MECHANICAL HVAC	CONTROLS		
	Pro Des Dra Cho	t No.: ed By By: ed By	2 /: 9	9	174)(0-100 s E D	DO3 BR BJZ SB

Bar Measures 1 inch