

GLASS AND GLAZING

2. Provide spacers for all glass sizes larger than 50 unites inches, to separate glass from stops; except where continuous glazing gaskets or felts are provided.
 - a. Locate spacers no more than 24" apart, and no closer than 12" to a corner.
 - b. Place spacers opposite one another.
 - c. Make bite of spacer on glass 1/4" or more.
- C. Set glass in a manner which produces the greatest possible degree of uniformity in appearance.
- D. Mask, or otherwise protect, surfaces adjacent to installation of sealants.

3.4 ACCEPTANCE

- A. Protect glass from damage.
- B. After inspection, remove labels, paint smears, etc. and wash glass clean.
- C. Replace any broken or damaged glass.

END OF SECTION

